


SBS / INSTALLATION INSTRUCTIONS: SLIDING BULLETIN CASE INSTALLATION

SBS SURFACE MOUNT SLIDING BULLETIN CASE SYSTEM / INSTALLATION INSTRUCTIONS:

1. DISTRIBUTE BOARDS TO THEIR SPECIFIED LOCATIONS.
2. DETERMINE LOCATION AND MOUNTING HEIGHT ABOVE FINISH FLOOR.
3. LOCATE SPECIFIED AREA ON WALL FOR CASE LOCATION.
4. MEASURE HEIGHT OF UNIT; DEDUCT $\frac{3}{16}$ " [.1875] STARTING FROM EITHER SIDE OF BOTTOM LEVEL LINE, MEASURE UP USING DIMENSION JUST ESTABLISHED.
5. REPEAT FOR OTHER SIDE OF UNIT.
6. SNAP A LINE FROM BOTH POINTS. THIS LINE REPRESENTS THE LEVEL PLANE AT WHICH YOU WILL INSTALL THE TOP ALUMINUM ANGLE. STARTING FROM EITHER END OF UNIT LOCATION, HOLD THE ALUMINUM ANGLE LEVEL AND DRILL HOLE $1\frac{1}{2}$ " [1.500] DEEP USING A $\frac{3}{16}$ " [.1875] MASONRY BIT. PLACE A WALL ANCHOR IN HOLE DRILLED AND ATTACH ALUMINUM ANGLE WITH FASNTER PROVIDED.
7. INSTALL MOUNTING CLIPS ON THE BOTTTOM OF UNIT AT $16"$ [16.000] TO $24"$ [24.000] O.C. BOTTOM LEVEL LINES TO COMPLETE MOUNTING CLIP INSTALLATION.
8. MAKE A MARK ON WALL AT CENTER OF EACH MOUNTING CLIP. THESE WILL SERVE AS LANDMARKS FOR LOCATING MOUNTING CLIPS, AS THEY ARE NOT VISIBLE DURING FINAL INSTALLATION.
9. PUSH UNIT AGAINST WALL OVER MOUNTING CLIPS. DEPENDING ON SIZE OF OR CONFIGURATION OF BOARD, THIS STEP MAY REQUIRE THE NEED FOR ADDITIONAL MANPOWER. LINE UNIT UP IN SPECIFIED AREA, BEGINNING AT EITHER SIDE OF BOARD, USE LANDMARKS MADE PREVIOUSLY TO LOCATE MOUNTING CLIPS AND FASTEN WITH $\frac{5}{8}$ " [.625] TRUSS HEAD TECH SCREWS PROVIDED. REPEAT ABOVE STEP FOR ALL REMAINING MOUNTING CLIPS.
10. WIPE OFF ANY DUST OR DEBRIS CREATED FROM SHIPPING OR INSTALLATION. CLEAN SURFACE OF FIXED BACK PANEL AND SURROUNDING SURFACES AS NEEDED TO A READY FOR USE CONDITION (ANY HOUSEHOLD GRADE GLASS OR SURFACE CLEANER SHOULD BE SUFFICIENT).

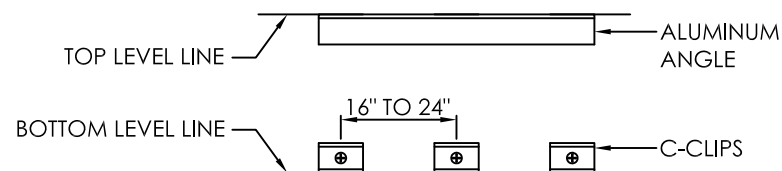

(PAGE 1 OF 1)