




## GLASWRITE / INSTALLATION INSTRUCTIONS:

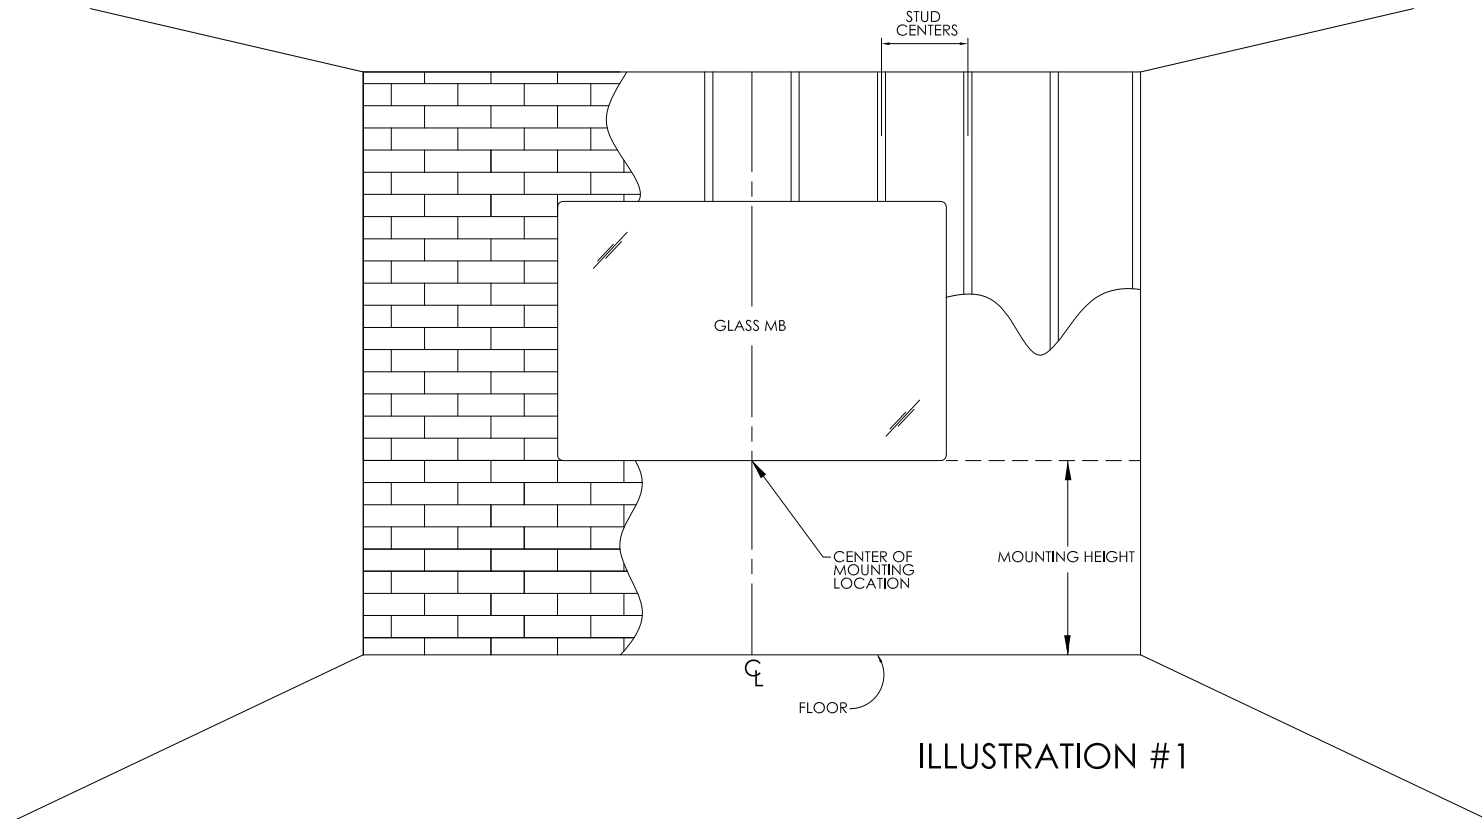

### INSTALLATION PREPERATION

1. DETERMINE THE TYPE OF WALL YOU ARE MOUNTING THE BOARD ON. IF MOUNTING TO A MASONRY SURFACE, REFER TO "HARDWARE FOR DIFFERENT WALL TYPES" ON PAGE 2 FOR PROPER HARDWARE APPLICATION.
2. ESTABLISH CENTER OF MOUNTING LOCATION (CENTERLINE & HEIGHT ABOVE FINISH FLOOR).
3. DETERMINE THE TYPE OF BACKING AVAILABLE, (CONTINUOUS HORIZONTAL BACKING, VERTICAL WOOD/METAL STUD BACKING). IF VERTICAL STUD BACKING IS PRESENT THAN STUD LOCATIONS MUST BE IDENTIFIED. **\*\*\*\*NOTE: BACKING IS RECOMMENDED FOR ALL GYPSUM APPLICATIONS\*\*\*\***
4. MEASURE UP FROM CENTER MOUNTING LOCATION 6" (SIX INCHES). WITH BOARD WIDTH IN MIND, DRAW OR SNAP A LEVEL LINE ALONG THIS PLANE. THIS LINE REPRESENTS THE PLANE THAT YOU WILL INSTALL THE BOTTOM PIECE OF HANGER BAR.
5. MEASURE UP FROM BOTTOM LEVEL LINE 36" AND SNAP A LEVEL LINE ALONG THIS PLANE. THIS LINE REPRESENTS THE PLANE THAT YOU WILL INSTALL THE TOP PIECE OF HANGER BAR.



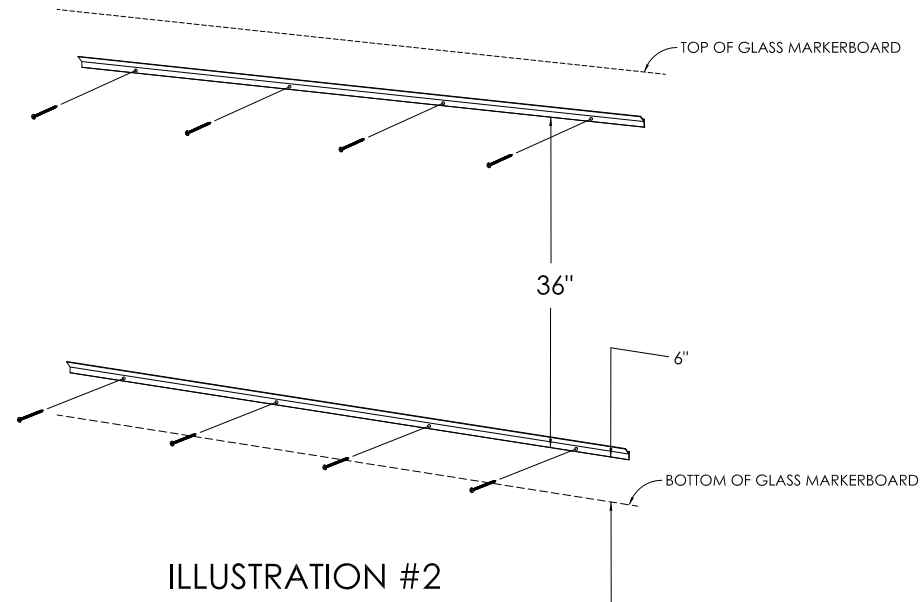


ILLUSTRATION #2


## INSTALLATION

1. ESTABLISH BACKING LOCATIONS ALONG LEVEL, HOLD HANGER BAR ON LEVEL LINE AND TRANSFER LOCATION MARKS TO HANGER BAR.
2. DRILL 7/32" - 1/4" HOLES FOR FASTENERS.
2. INSTALL HANGER BAR AND REPEAT FOR SECOND HANGER BAR. (REFER TO ILLUSTRATION #2)

\*\*\*\*NOTE: IT IS RECOMMENDED TO LOCATE AND UTILIZE ANY AVAILABLE BACKING FOR A SECURE INSTALLATION. \*\*\*\*

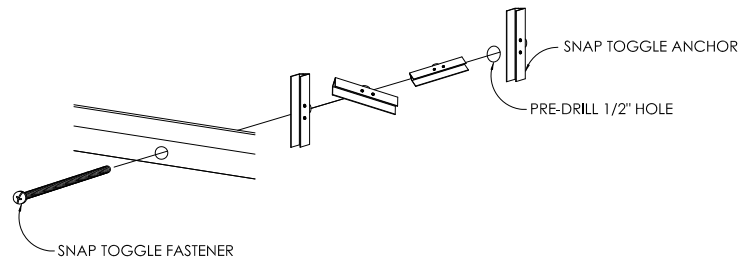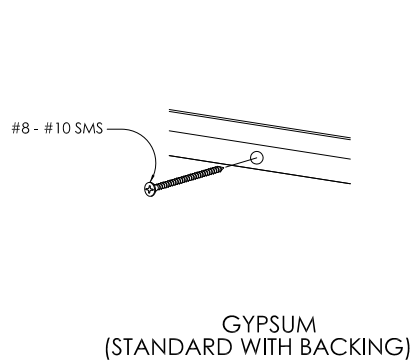

FOR DETAILED SNAPTOGGLE INSTRUCTIONS REFER TO:  
<http://www.toggler.com/products/snaptoggle/overview.php>

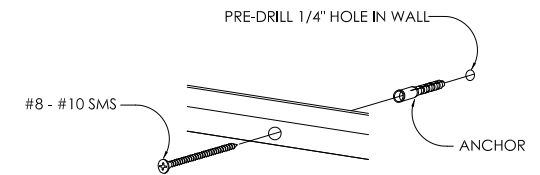

## "HARDWARE FOR DIFFERENT WALL TYPES"

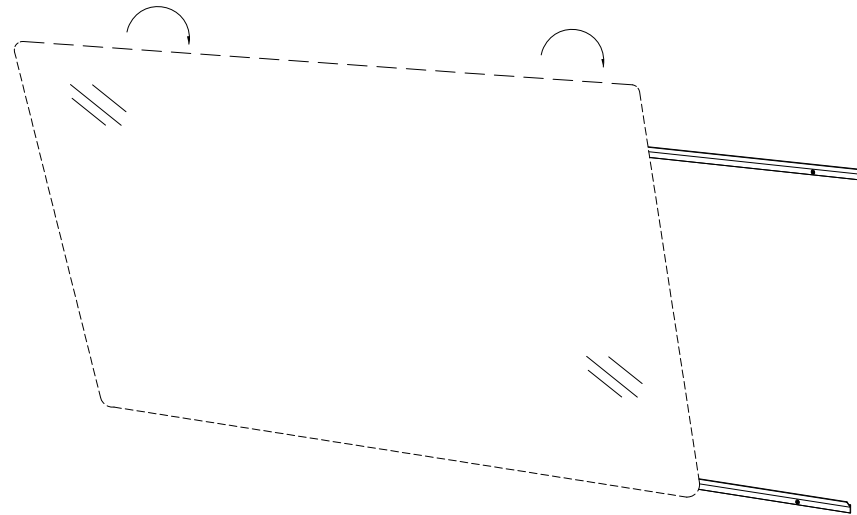


ILLUSTRATION #3

## INSTALLATION COMPLETION

1. GENTLY LIFT GLASS MARKERBOARD AND LOWER ONTO HANGER BAR ENSURING BOTH HANGER BARS ARE SEATED PROPERLY IN A MARRIED POSITION.  
\*\*\*\*NOTE: THIS STEP MAY REQUIRE (2) INSTALLERS\*\*\*\*
2. CLEAN BOARD SURFACE FOR A READY TO USE CONDITION.