




GLASWRITE / INSTALLATION INSTRUCTIONS:

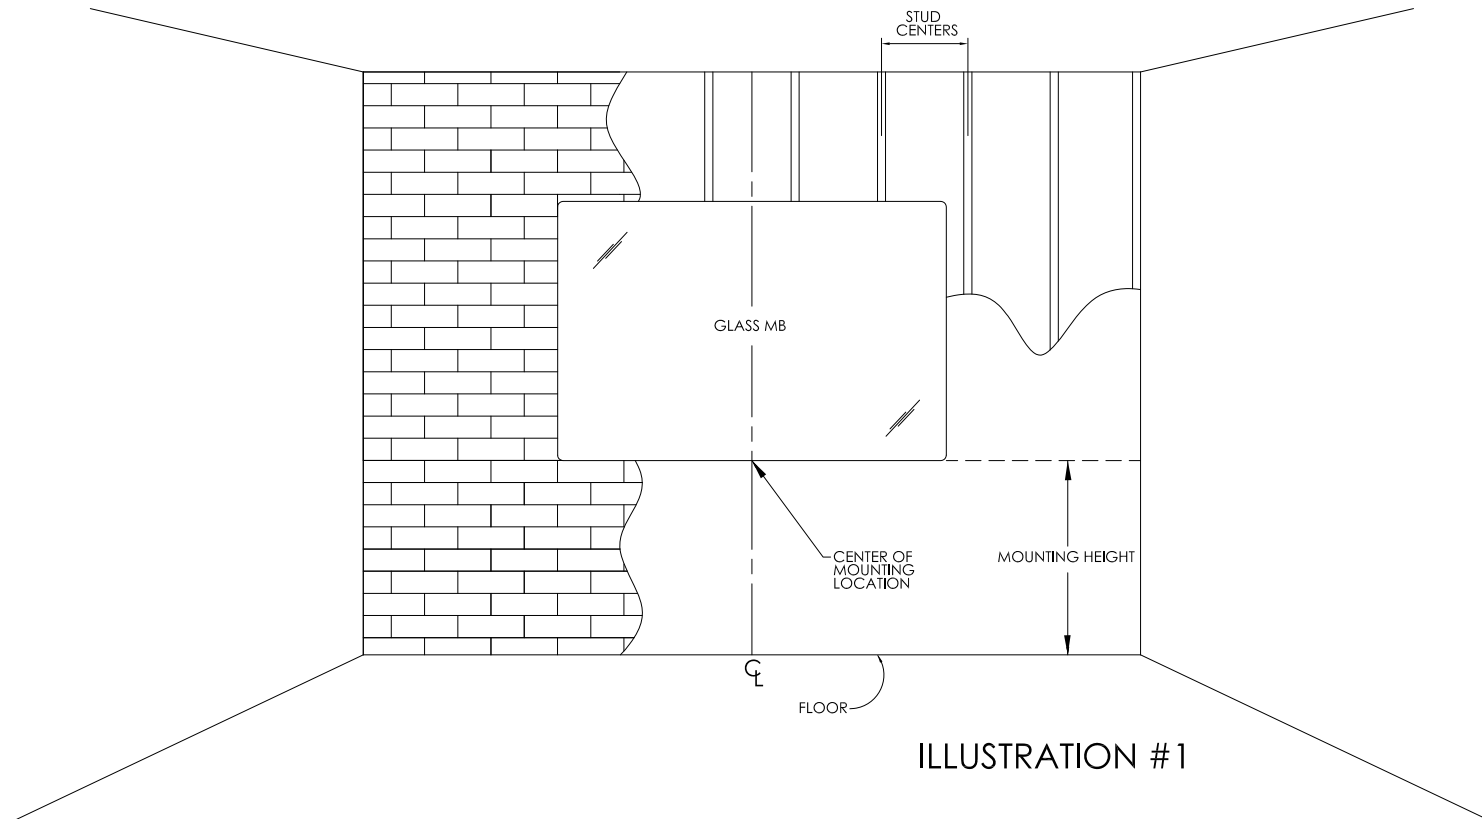

INSTALLATION PREPERATION

1. DETERMINE THE TYPE OF WALL YOU ARE MOUNTING THE BOARD ON. IF MOUNTING TO A MASONRY SURFACE, REFER TO "HARDWARE FOR DIFFERENT WALL TYPES" ON PAGE 3 FOR PROPER HARDWARE APPLICATION.
2. ESTABLISH CENTER OF MOUNTING LOCATION (CENTERLINE & HEIGHT ABOVE FINISH FLOOR). MAKE A SMALL MARK ON THE WALL SO AS TO IDENTIFY THIS MOUNTING LOCATION.

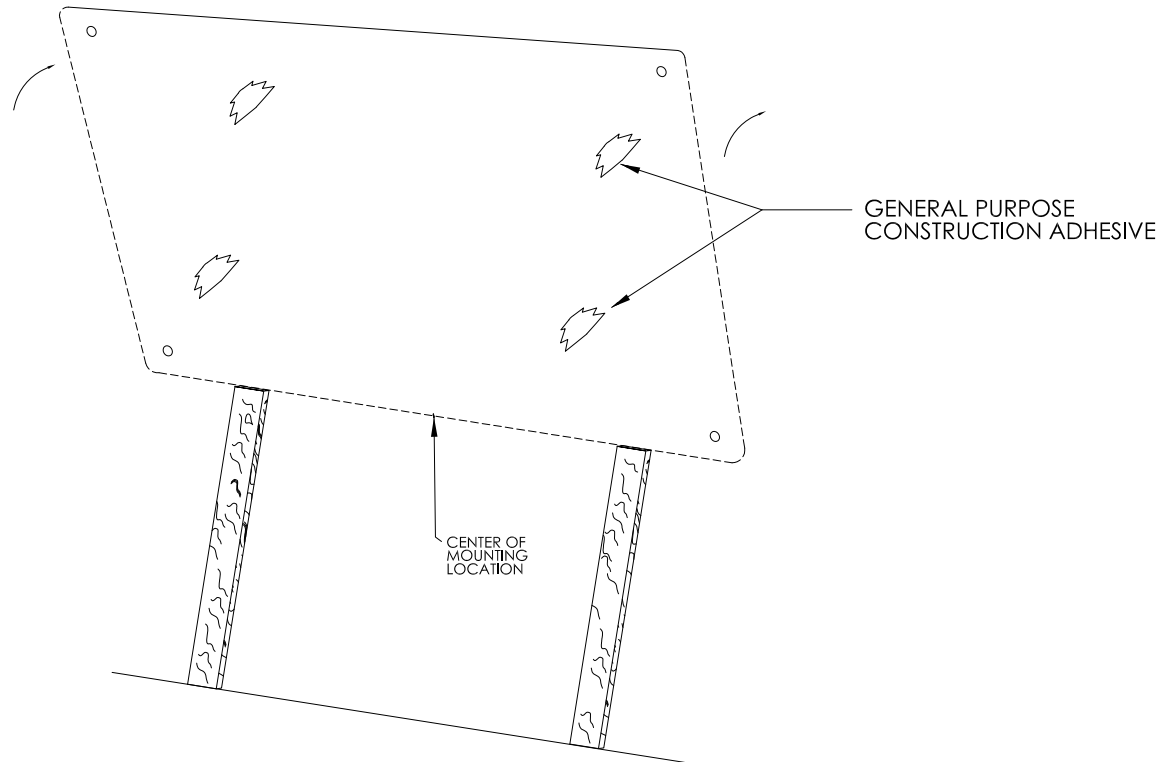



ILLUSTRATION #2

INSTALLATION


1. WITH CENTER & MOUNTING HEIGHT OFF FINISH FLOOR ESTABLISHED, LEAN TWO STICKS AGAINST WALL ALONG THIS PLANE.
NOTE: THESE STICKS WILL SUPPORT THE WEIGHT OF THE BOARD
2. SET BOARD ON STICKS AND PUSH AGAINST WALL TO DRY FIT.
3. DRAW OR SCRIBE OUTLINE OF EACH HOLE.
4. PULL BOARD AWAY FROM WALL AND OFF THE STICKS AND SET ASIDE.
5. REFER TO PAGE 3 FOR HARDWARE AND WALL TYPE REQUIREMENTS.




"HARDWARE FOR DIFFERENT WALL TYPES"

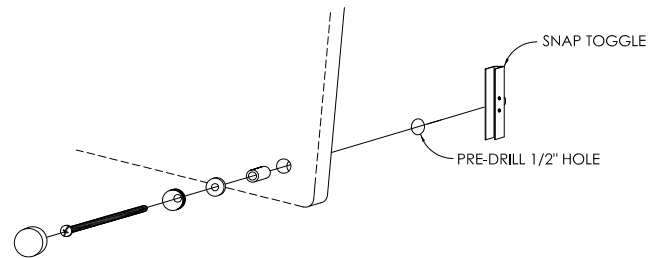

GYPSUM (WITH NO BACKING)
 SNAPTOGGLES (PROVIDED) MUST BE USED
 FOR DETAILED SNAPTOGGLE INSTRUCTIONS REFER TO:
<http://www.toggler.com/products/snaptoggle/overview.php>

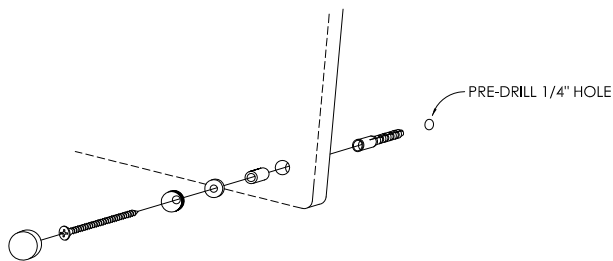

MASONRY

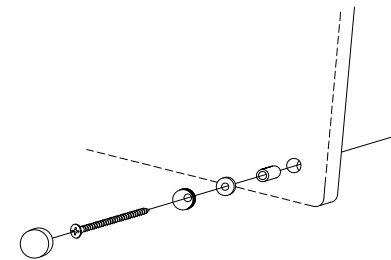

GYPSUM
 (STANDARD WITH BACKING)
 (RECOMMENDED)

INSTALLATION COMPLETION

1. DETERMINE PROPER HARDWARE SUITED FOR YOUR WALL TYPE AND PREP WALLS (DRILL HOLES) PROPERLY PER THE HARDWARE REQUIREMENTS.
2. PLACE GLASS MARKERBOARD ON THE TWO STICKS AND PUSH BACK AGAINST WALL.
3. FASTEN AS REQUIRED PER THE HARDWARE RECOMMENDATIONS.
4. CLEAN BOARD SURFACE FOR A READY TO USE CONDITION.